USER GUIDE AND SPECIFICATIONS

NI WSN-3226

NI Wireless Sensor Network 4-Channel, 20-Bit Voltage/RTD Node

This user guide describes how to use the NI WSN-3226 voltage/RTD node and lists its specifications. Figure 1 shows the NI WSN system components.

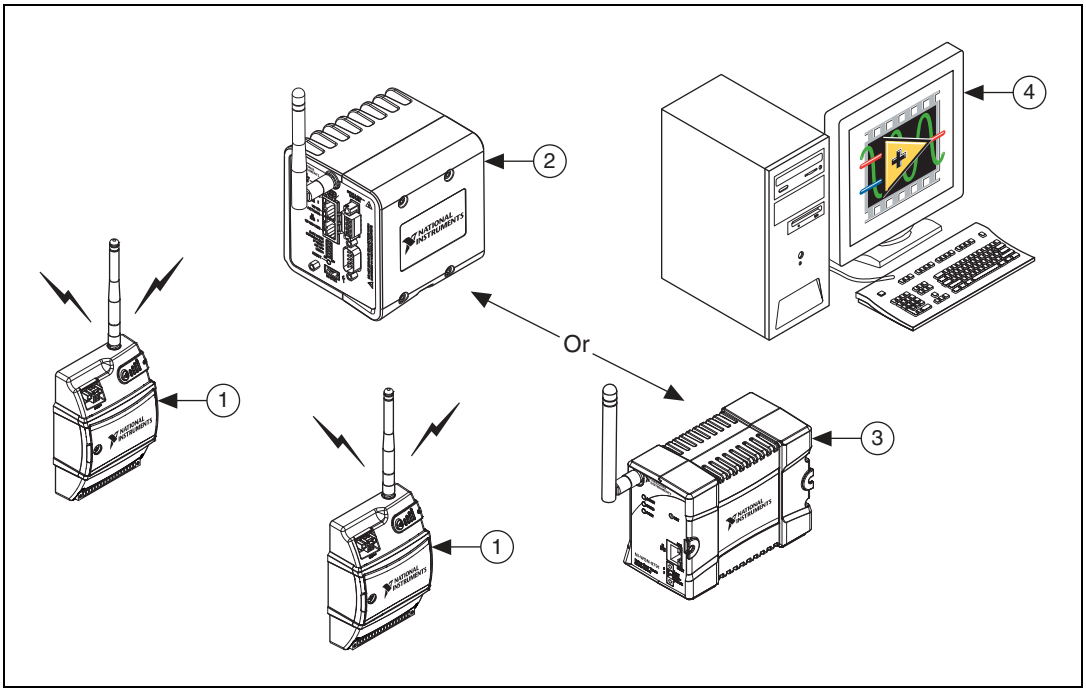

1	NI WSN-32*xx* Nodes	3	NI WSN-9791 Ethernet Gateway
2	NI 9792 WSN Real-Time Gateway	4	PC Running NI Software

Figure 1. NI WSN System Components

The NI WSN-3226 is a four-channel, low-power, wireless voltage/resistance device that works with other NI WSN-32*xx* nodes and gateways to form a wireless sensor network. The NI WSN system consists of one or more NI WSN gateways, up to 36 NI WSN-32*xx* nodes per gateway, and multiple PCs or Programmable Automation Controllers (PACs) to receive and analyze the distributed sensor data. For more information about PACs, visit `ni.com`.

When you connect the NI WSN gateway, you can use a separate host PC running Windows, or a PAC running NI LabVIEW Real-Time, to display measurement results, status information, and to change the NI WSN gateway and NI WSN-3226 device settings.

NATIONAL INSTRUMENTS

Dimensions

Figure 2 shows the NI WSN-3226 device dimensions.

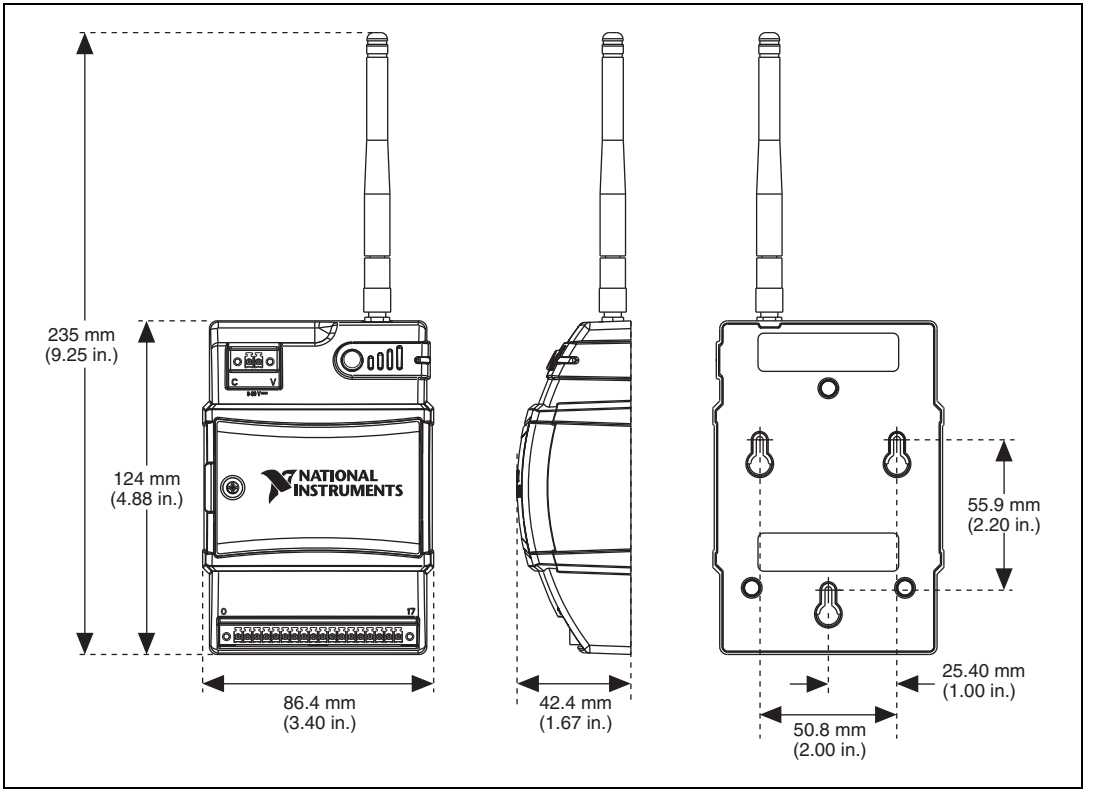

Figure 2. NI WSN-3226 Device Dimensions

Safety Guidelines

Operate the NI WSN-3226 device only as described in this user guide.

Hot Surface This icon denotes that the component may be hot. Touching this component may result in bodily injury.

NI WSN Safety Information

The following section contains important safety information that you *must* follow when installing and using NI WSN products.

Caution Do *not* operate the NI WSN product in a manner not specified in the user manual or operating instructions. Product misuse can result in a hazard. You can compromise the safety protection built into the product if the product is damaged in any way. If the product is damaged, return it to National Instruments for repair.

Caution Do *not* substitute parts or modify the NI WSN product. Use the product only with the devices, accessories, and cables specified in the installation instructions.

Caution Do *not* operate NI WSN products in an explosive atmosphere or where there may be flammable gases or fumes.

Caution If you need to clean a NI WSN product, wipe it with a dry towel. The product *must* be completely dry and free from contaminants before you return it to service.

Caution Operate the product indoors only at or below Pollution Degree 2. Pollution is foreign matter in a solid, liquid, or gaseous state that can reduce dielectric strength or surface resistivity.

Caution You *must* insulate signal connections for the maximum voltage for which the NI WSN product is rated. Do *not* exceed the maximum ratings for the product. Do *not* install wiring while the product is live with electrical signals. Do *not* remove or add connector blocks when power is connected to the NI WSN system. Avoid contact between your body and the connector block signal wiring when hot-swapping devices.

Caution To comply with safety regulations, use only recommended batteries with this product. Refer to the *Battery Power* section for the recommended battery types.

Safety Guidelines for Hazardous Locations

The NI WSN-3226 is suitable for use in Class I, Division 2, Groups A, B, C, D, T4 hazardous locations; Class I, Zone 2, AEx nC IIC T4 and Ex nL IIC T4 hazardous locations; and nonhazardous locations only. Follow these guidelines if you are installing the NI WSN-3226 in a potentially explosive environment. Not following these guidelines may result in serious injury or death.

Caution Observe the battery manufacturers' operating temperature ratings listed in the *Battery operating temperature range* specification section.

Caution Do not disconnect the power supply wires and connectors from the device unless power has been switched off.

Caution Do not install or remove the device unless power has been switched off.

Caution Substitution of components may impair suitability for Class I, Division 2.

Caution For Zone 2 applications, install the WSN system in an enclosure rated to at least IP 54 as defined by IEC 60529 and EN 60529.

Special Conditions for Hazardous Locations Use in Europe

Caution The NI WSN-3226 has been evaluated as Ex nA nL IIC T4 equipment under DEMKO Certificate No. 07 nA nL 0626664X. Each device is marked II 3G and is suitable for use in Zone 2 hazardous locations, in ambient temperatures of –40 °C ≤ Ta ≤ 70 °C.

Electromagnetic Compatibility Guidelines

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) as stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference when the product is operated in its intended operational electromagnetic environment.

This product is intended for use in industrial locations. There is no guarantee that harmful interference will not occur in a particular installation, when the product is connected to a test object, or if the product is used in residential areas. To minimize the potential for the product to cause interference to radio and television reception or to experience unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any changes or modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.

The following statements contain important EMC information needed before installing and using this product:

Caution To ensure the specified EMC performance, product installation requires either special considerations or user-installed, add-on devices. See the product installation instructions for further information.

Caution To ensure the specified EMC performance, operate this product only with shielded cables and accessories.

Caution To ensure the specified EMC performance, operate this product with a DGND terminal on the I/O connector tied to earth ground or use the NI recommended external power supply (NI part number 780703-01) or equivalent.

Caution The inputs/outputs of this product can be damaged if subjected to Electrostatic Discharge (ESD). To prevent damage, industry-standard ESD prevention measures must be employed during installation, maintenance, and operation.

Caution This product may become more sensitive to electromagnetic disturbances in the operational environment when test leads are attached or when connected to a test object.

Related Documentation

Check `ni.com/manuals` for the most recent documentation. For a complete list of documentation related to the NI WSN system, refer to `ni.com/info` and enter `rdwsnrd`.

In addition to this guide, the following documents may be useful when configuring your NI WSN system:

- *NI Wireless Sensor Network Getting Started Guide*
- *NI WSN-9791 Ethernet Gateway User Guide and Specifications*
- *NI 9792 WSN Real-Time Gateway User Guide and Specifications*
- *Configuring WSN in MAX*, available from **Start»All Programs»National Instruments»NI-WSN**
- *LabVIEW Help for WSN Devices*, available in LabVIEW from **Help»LV Help» WSN Devices Help**
- *NI-WSN Readme*, available on the software installation disc included with your gateway

Training Courses

If you need more help getting started developing an application with NI products, NI offers training courses. To enroll in a course or obtain a detailed course outline, refer to `ni.com/training`.

Technical Support on the Web

For additional support, refer to `ni.com/support` or `zone.ni.com`.

Software Overview

Note Refer to the *NI WSN Readme*, available on the software installation disc included with your gateway, for NI software application version support.

NI-WSN software includes NI Measurement & Automation Explorer (MAX) as well as server and driver software for easy integration into application software packages. These software components manage the low-level communications and hardware configurations, simplifying programmatic access to I/O channels. The NI-WSN software is on the software installation disc included with your NI WSN

gateway device. The NI-WSN software is supported by Windows 7/Vista/XP and contains the following components:

- NI MAX
- NI-WSN

You can download a current version of NI-WSN software from `ni.com/support`. Using your Web browser, go to `ni.com/support` and select **Drivers and Updates»Distributed I/O»Wireless Sensor Networks**, and then select the latest version of NI-WSN software. If you are using other software, refer to the installation instructions that accompany your software.

What You Need to Get Started

To set up and use NI LabVIEW with the NI WSN-3226 device, you need the following:

- NI WSN gateway
- NI WSN-3226 device(s) with a 5–30 V power supply or four alkaline or lithium AA 1.5 V batteries for each node. Refer to the *Battery Power* section for recommended battery types.
- Mounting hardware (DIN rail, panel-mount, or rack mount accessory)
- Ethernet cable/connection
- 1/8 in. flathead and number 2 Phillips screwdrivers
- NI-WSN software version 1.2 or later
- Host PC running Windows 7/Vista/XP or LabVIEW Real-Time
- NI LabVIEW 2010 (32-bit) or later
- **(NI 9792 WSN Real-Time Gateway Only)**—NI LabVIEW 2009 SP1 (32-bit) Real-Time Module or later
- Related hardware and software documentation

Unpack the Device and Install the Antenna

Remove the device from the package and inspect the device. Contact NI if the device appears damaged. Do *not* install a damaged device.

Caution The device is static sensitive. Always properly ground yourself and the equipment when handling or connecting to the device.

To attach the antenna, align the antenna with the mount and screw it on, as shown in Figure 3.

Caution The antenna must be attached to the NI WSN device in order for the NI WSN device to function correctly.

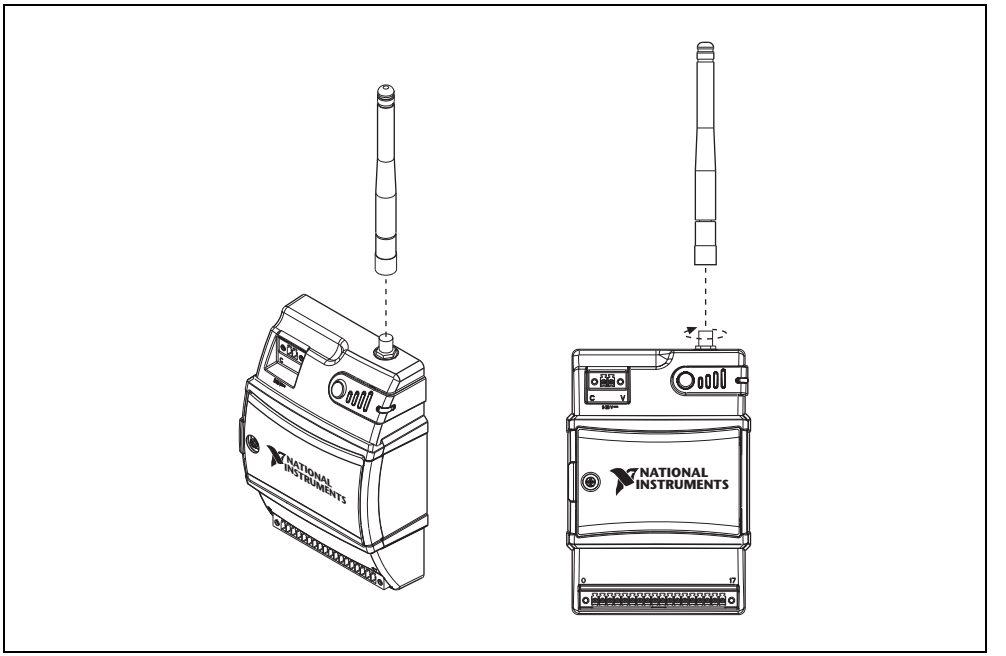

Figure 3. Attach the Antenna to the Device

Mounting the NI WSN-3226 Device

You can mount the NI WSN-3226 on a panel or on a 35 mm DIN rail. For kit accessory ordering information, refer to the NI WSN product page accessory section at `ni.com`. Before using any of these mounting methods, remove and save the serial number sticker located on the back of the NI WSN-3226 device for future use when configuring your device in software. For the NI WSN-3226 device dimensions, refer to Figure 2.

Caution Your installation *must* allow 50.8 mm (2 in.) of clearance in front of devices for common connector cabling, such as the 18-terminal detachable screw terminal connector.

Attaching the NI WSN-3282 DIN Rail (Optional)

You can mount the NI WSN-3226 on a standard 35 mm DIN rail using a NI WSN-3282 DIN rail clip, NI part number 781074-01. Complete the following steps to mount the NI WSN-3226 on a DIN rail:

Caution Power off the device before mounting it to the DIN rail.

Note Use thread-forming screws to permanently affix the DIN rail clip to the device. Unscrewing and reinstalling the thread-forming screws will produce a compromised connection between the DIN rail clip and the device.

1. Fasten the DIN rail clip to the NI WSN-3226 using a number 2 Phillips screwdriver and the four 8-32 × 5/16 in. thread-forming screws that shipped with the DIN rail clip(s). Figure 4 shows how to fasten the DIN rail clip to the NI WSN-3226.

Caution Do *not* use screws longer than 5/16 in. to fasten the DIN rail clip to the NI WSN-3226.

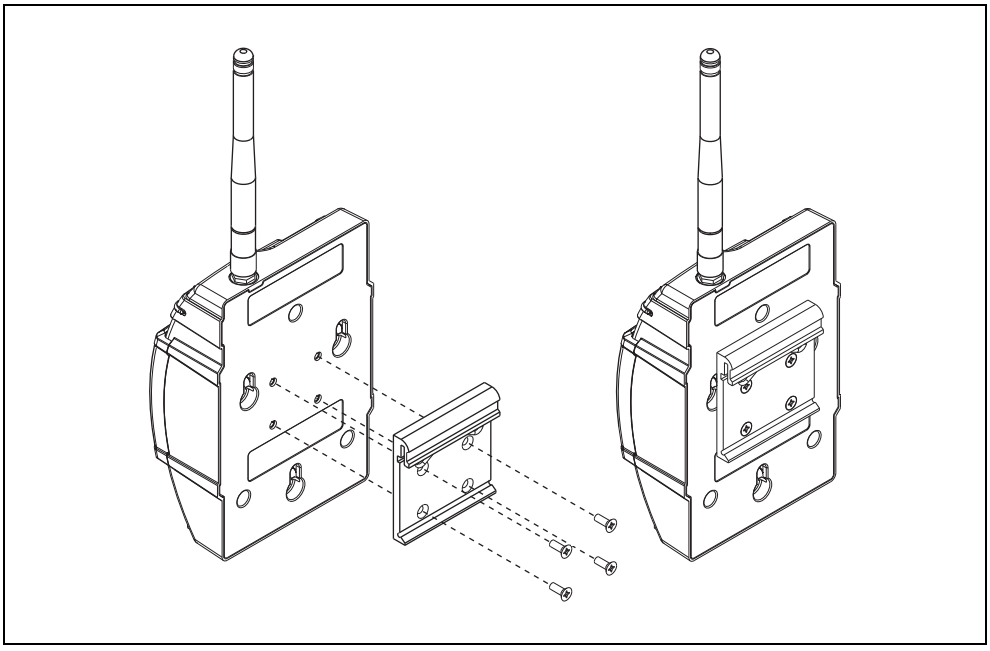

Figure 4. NI WSN-3226 Device DIN Rail Installation

2. Insert one edge of the DIN rail into the deeper opening of the DIN rail clip, as shown in Figure 5.

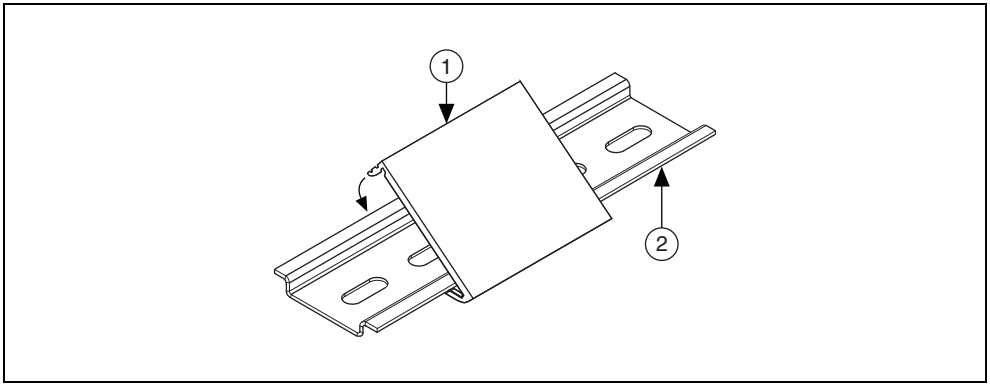

1	DIN Rail Clip (Without Device)	2	DIN Rail

Figure 5. DIN Rail Clip Installation

3. Press down firmly on the NI WSN-3226 to compress the spring until the clip locks into place on the DIN rail.

Using a Panel Mount Accessory

The NI WSN-3280/3281 panel mount accessories, part numbers 780999-01 and 781073-01, each include a retention clip and knob and integrated strain relief for power and I/O wires. You can use the NI WSN-3280 panel mount accessory to attach the NI WSN-3226 device to a panel or other flat surface. The NI WSN-3281 panel mount accessory also includes a magnetic mount for attaching the NI WSN-3226 device to metallic surfaces. Figure 6 shows the NI WSN-3226 panel mounting dimensions.

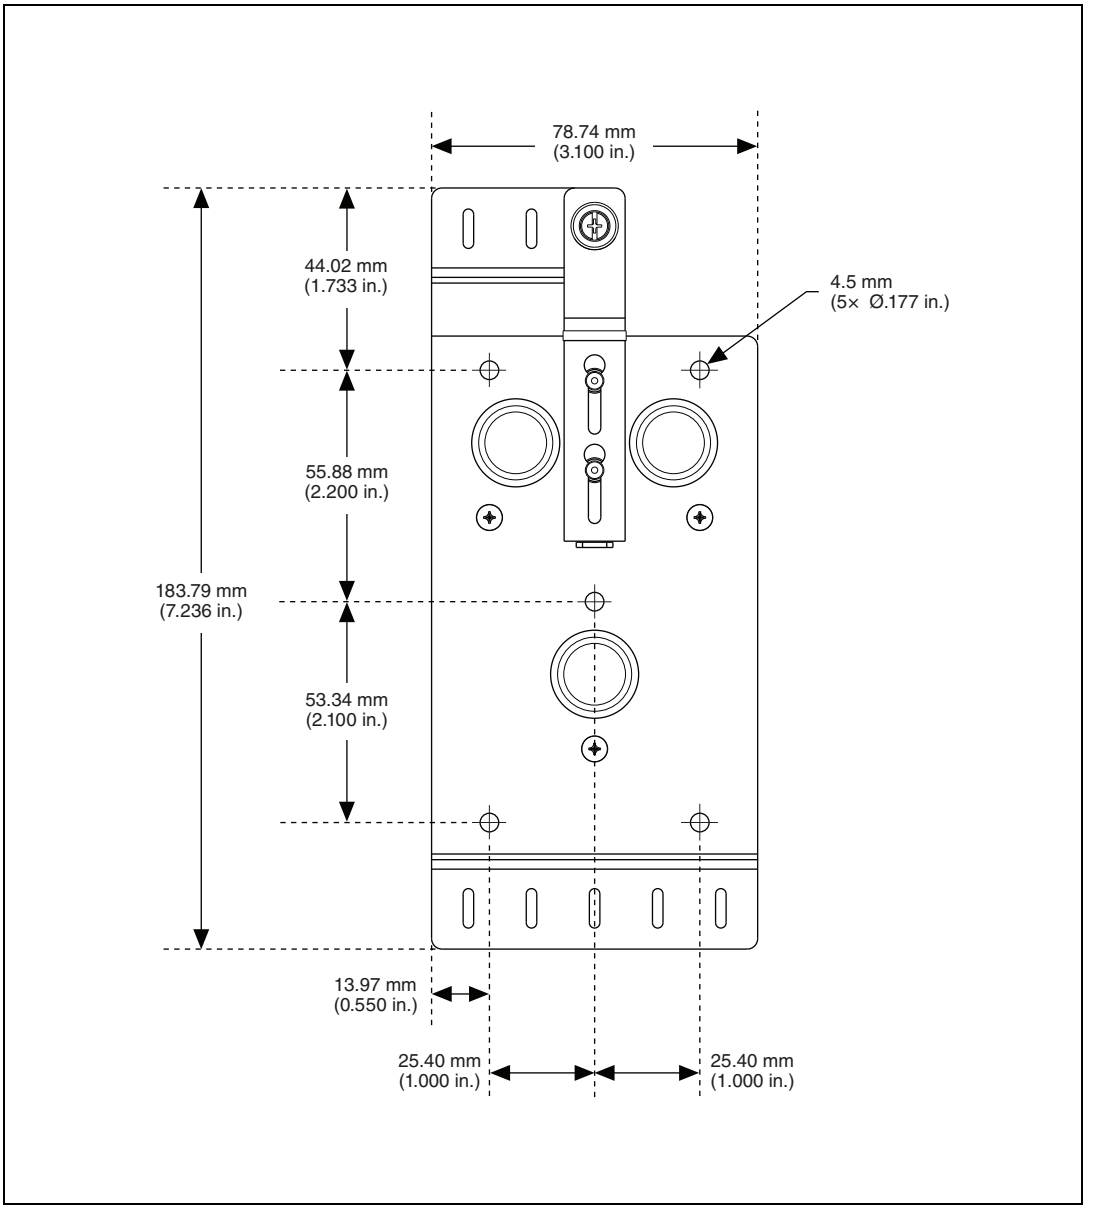

Figure 6. NI WSN-3226 Device Panel Mount Dimensions

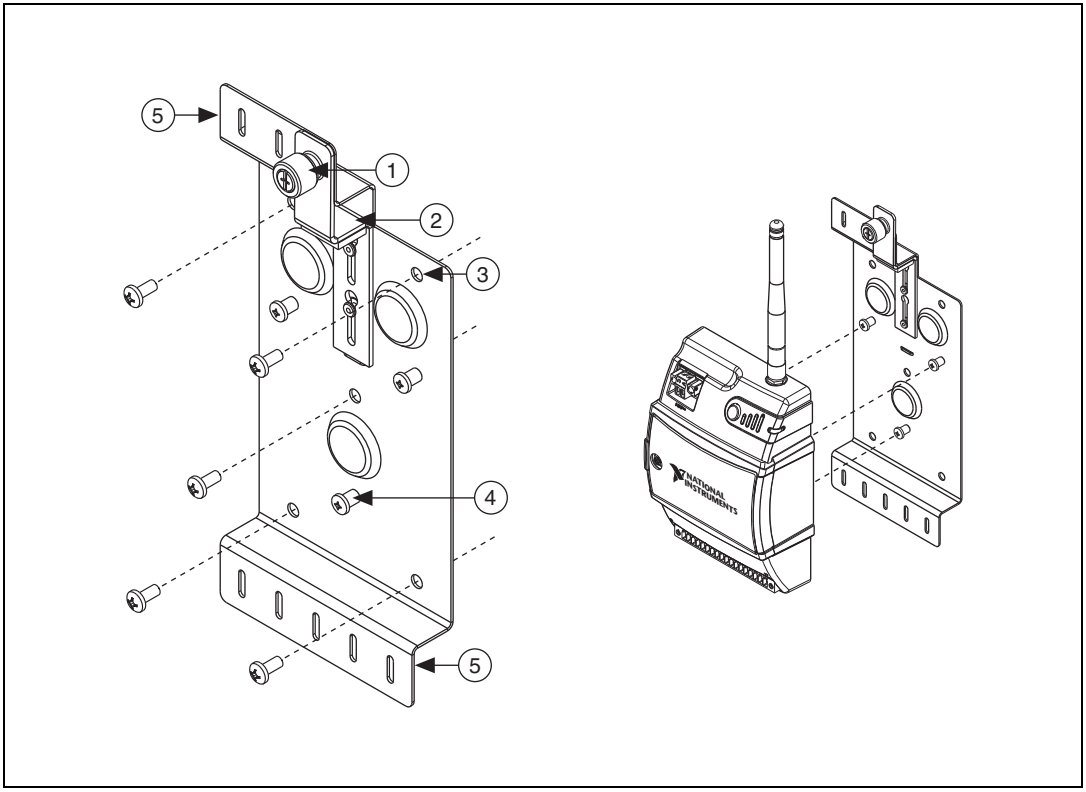

1	Retention Knob	4	Integrated Mounting Pin
2	Retention Clip	5	Power and I/O Strain Relief
3	Mounting Hole		

Figure 7. Panel Mount Accessory

Refer to Figure 7 while completing the following steps to mount the NI WSN-3226 on a panel:

1. **(NI WSN-3280)** Bolt or screw the panel mount accessory to a panel using five 8-32 or M4 screws.
   (NI WSN-3281) Attach the panel mount accessory using the integrated magnet.
2. Slide the NI WSN-3226 device into the panel mount accessory as shown in Figure 7.

3. Slide the retention clip down and tighten the panel mount knob to secure the NI WSN-3226 device as shown in Figure 8.

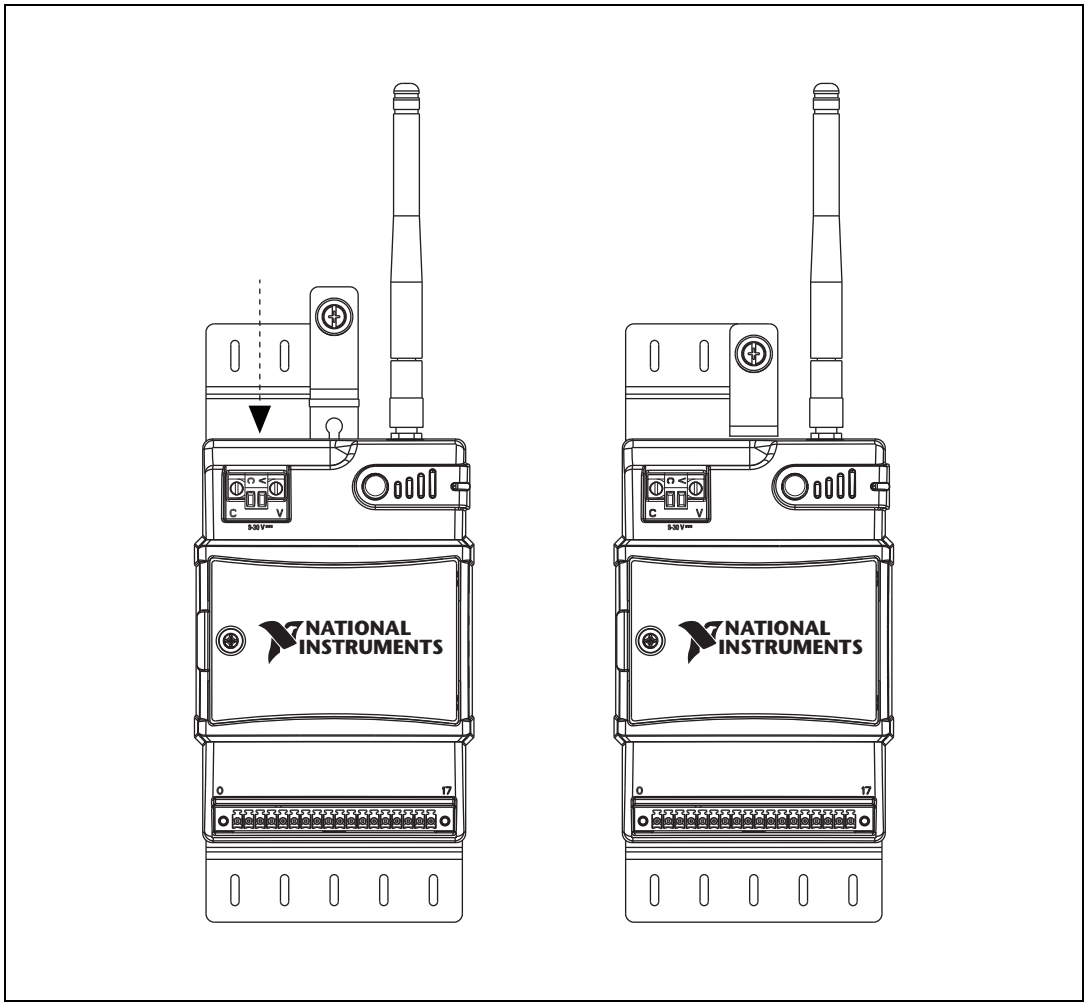

Figure 8. Slide Retention Clip Down and Tighten Panel Mount Knob

4. (Optional) Secure any I/O signal or power supply cabling to the panel mount accessory using a zip-tie and the integrated strain relief slots.

Using the Integrated Panel Mount Slots

You can also mount the NI WSN-3226 to a panel using the integrated panel mount slots as shown in Figure 9.

1. Attach three number 8 or M4 pan head screws in the mounting panel, leaving 0.1 in. space under the head of each screw. Refer to Figure 2 for the correct hole pattern and dimensions.
2. Slide the NI WSN-3226 device onto the panel.

Note In this configuration, the NI WSN-3226 is held in place only by the weight of the device and the friction of the screw attachment. Use the DIN rail clip or panel mount accessories in high vibration environments.

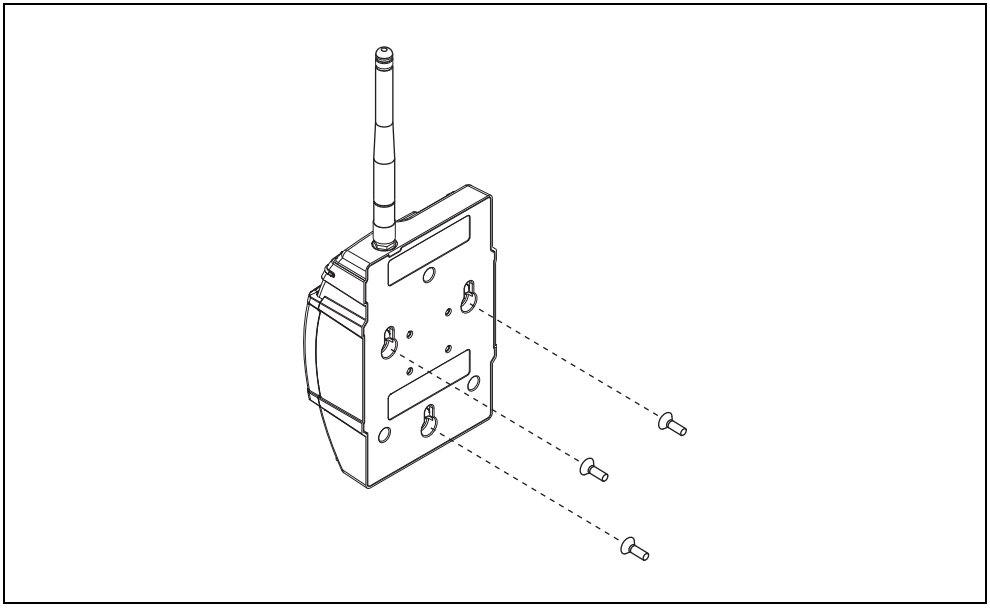

Figure 9. Integrated Panel Mount Slots

Caution Disconnect power before removing the device from the panel.

Setting Up the NI WSN-3226 Device

The following sections discuss setting up the NI WSN-3226 for use.

Installing the Software

You must be an Administrator to install NI software and devices on your computer. Before connecting the hardware, install the following software in the following order:

1. NI LabVIEW, available at `ni.com/support`.
2. NI-WSN and NI MAX, which are included on the software installation disc included with your NI WSN gateway and are also available for download at `ni.com/support`.

Note After installation of NI-WSN, the *NI Wireless Sensor Network Getting Started Guide* is available from **Start»All Programs»National Instruments»NI-WSN**.

Powering the NI WSN-3226 Device

The NI WSN-3226 device can be powered by either an external power supply or four AA alkaline or lithium batteries. Refer to the *Specifications* section for details about the input power and battery requirements.

If both battery and external power are connected, the NI WSN-3226 functions from the external power input. The device is designed to provide battery backup in the event of loss of external power and will automatically switch to battery power when external power is lost.

Installing Batteries

To install batteries in the NI WSN-3226 device, complete the following steps:

1. Loosen the battery compartment retention screw and remove the compartment cover, as shown in Figure 10.

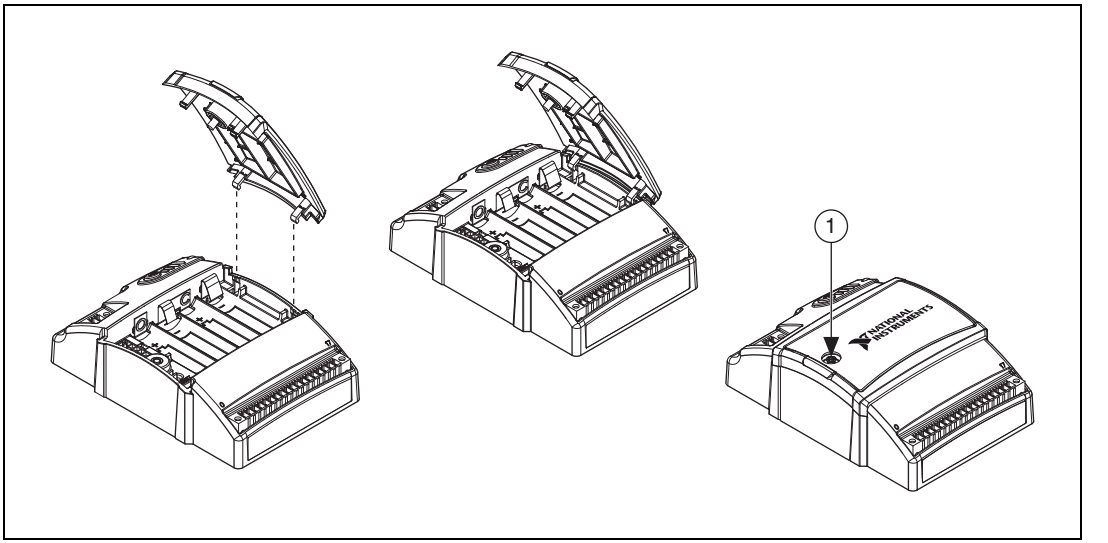

1	Battery Retention Screw

Figure 10. NI WSN-3226 Battery Compartment

Caution Using the incorrect battery type causes an explosion risk. Do *not* use rechargeable batteries. Refer to the *Battery Replacement and Disposal* section for information about how to dispose of used batteries.

Note When using the NI WSN-3226 device on battery power, you should configure the device as an end node so that it sleeps most of the time. Running a device configured in router mode from battery power greatly reduces the battery life. The device ships from the factory configured as an end node. For more information about how to switch the node from an end node to router mode, refer to *Configuring WSN in MAX*, available from **Start»All Programs»National Instruments»NI-WSN**.

2. Install four AA alkaline or lithium batteries in the device, making sure to install them with the correct polarity. Figure 12 shows the battery polarity markings inside the device battery compartment.
3. Reinstall the battery compartment cover and tighten the retention screw.

Connecting External Power to the NI WSN-3226 Device

To connect an external power supply to the NI WSN-3226, complete the following steps:

1. Remove the 2-position mini-combicon plug from the device. Loosen the retaining screws if necessary.

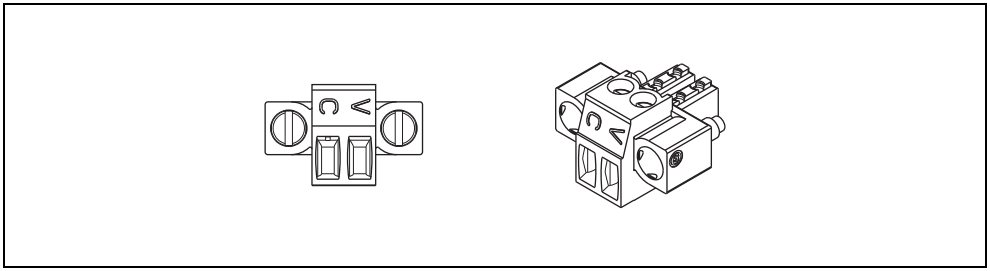

Figure 11. 2-Position Mini-Combicon Plug

2. Connect the external power supply positive lead to the V terminal.
3. Connect the negative (common) lead to the C terminal.
4. Reinstall the 2-position mini-combicon plug in the device and tighten the retaining screws.

Caution You must use a UL Listed ITE power supply marked LPS with the NI WSN-3226. The power supply must also meet any safety and compliance requirements for the country of use.

Device Interface

Figure 12 shows the NI WSN-3226 device interface.

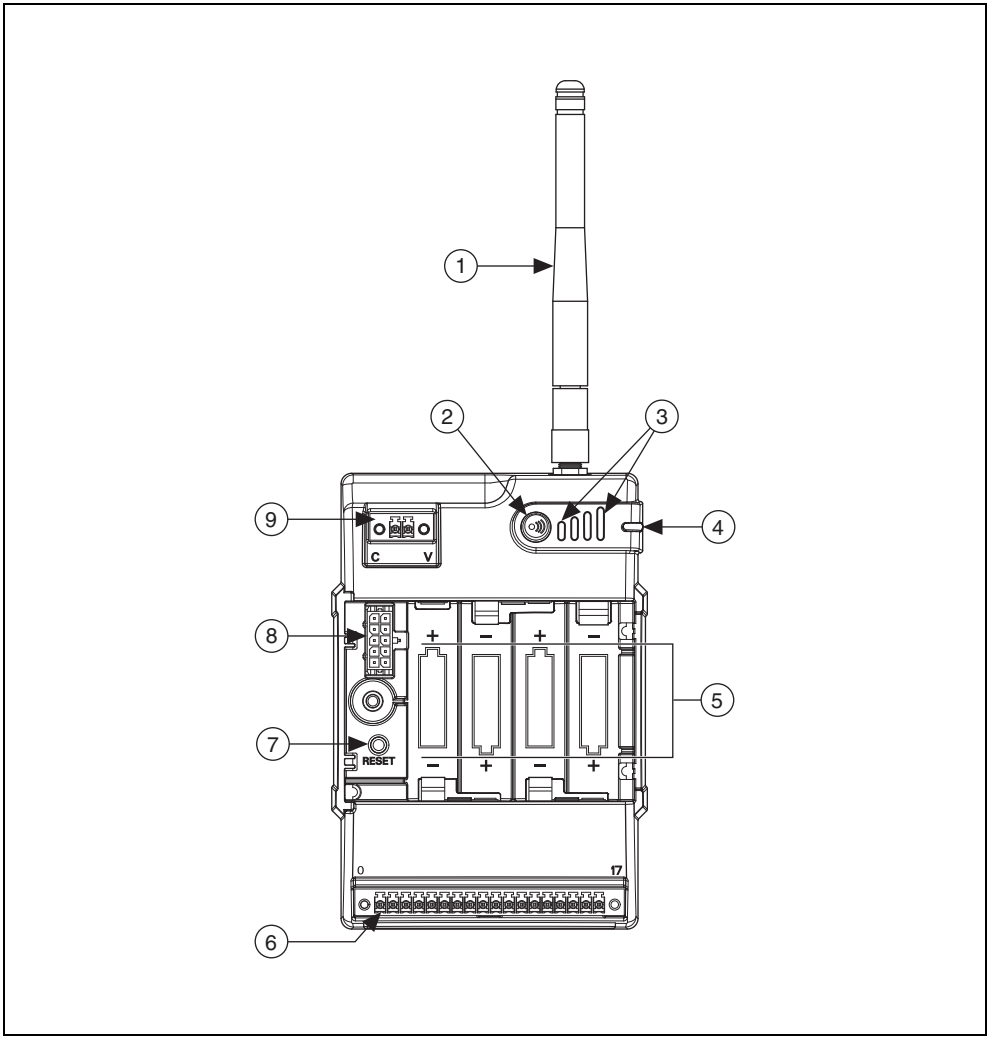

1	Antenna	6	I/O Connector
2	WSN Connect Button	7	Reset Button
3	Signal Strength/Status LEDs	8	Pro2 Port (Reserved for Future Use)
4	User LED	9	5–30 V External Power Input
5	Battery Slots/Polarity Indicators		

Figure 12. NI WSN-3226 Node Interface

Signal Strength/Status LED Indicators

The NI WSN-3226 has four signal strength/status LED indicators, which flash twice before displaying signal strength information. Table 1 shows the status and signal strength LED patterns.

Table 1. Signal Strength and Status LED State/Node Status

LED Indication Mode	LED State	LED Pattern	Device Status
Signal Strength—LEDS 1–4 blink twice and then display the signal strength for three seconds	LED 1–4 OFF		Low Signal
	LED 1 ON, LED 2–4 OFF		Poor
	LED 1–2 ON, LED 3–4 OFF		Fair
	LED 1–3 ON, LED 4 OFF		Good
	LED 1–4 ON		Excellent
Status Indication	Each LED 1–4 blinking in succession	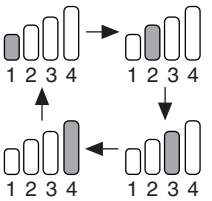	Searching for a network
	LED 1, 4 and 2, 3 alternate blinking		Updating firmware
	LED 1–4 continuously blinking		Error. Reboot device. If problem persists, reset device to factory default settings. Go to `ni.com/support` for additional troubleshooting steps.

WSN Connect Button

Note Refer to your NI WSN gateway documentation for detailed instructions about how to connect a NI WSN-3226 to the NI WSN gateway.

The NI WSN-3226 is equipped with a WSN connect button as shown in Figure 12. The button controls network connection and the LEDs, which display connection status.

Pressing the WSN connect button results in the device responses shown in Table 2.

Table 2. WSN Connect State/Device Status

Current Device State	Duration of Button Press	Result
Initial power on, not connected	Any duration	Node turns on and searches for an available network.
Connected to a NI WSN-9791 or NI 9792	<5 seconds	Node blinks all four signal strength LEDs twice, and then displays the signal strength as shown in Table 1.
	≥5 seconds	Node leaves current network and searches for a new network.

Reset Button

The NI WSN-3226 is equipped with a reset button as shown in Figure 12.

Pressing the reset button results in the following device responses:

- When pressed for fewer than 5 seconds, the device reboots with the current configuration.
- When pressed for 5 seconds or more, the device reboots into Factory Default Mode, which returns the device user configuration to the factory-set defaults.

Using the NI WSN-3226 Device

Analog Input Circuitry

The NI WSN-3226 supports two modes: voltage and 3-wire resistance/RTD mode. These modes are selectable per channel. Inputs are sampled with 20 bits of digital resolution, but effective resolution depends upon noise. The noise varies according to filter settings.

The NI WSN-3226 supports the ability to digitally filter the analog input in order to reject powerline noise from the measured signal. The node can enable rejection for 50 Hz, 60 Hz, or both frequencies, making it flexible for different environments where the powerline energy frequency may not be known. The node can also be programmed in one of two filtering strength modes: low power mode or high rejection mode. High rejection mode allows for better noise rejection at the expense of higher energy per measurement consumed by the node. If the powerline noise frequency is known, it is desirable to configure the filter to reject only that frequency instead of both 50 Hz and 60 Hz, since the latter will consume more energy per measurement than only 50 Hz or only 60 Hz rejection. When powerline filtering is disabled, logic in the node still performs filtering, but at higher frequencies. With powerline filtering disabled, a filtering strength of high rejection is recommended for the best resolution.

Voltage Mode

Note You must use 2-wire ferrules to create a secure connection when connecting more than one wire to a single terminal on the NI WSN-3226.

In voltage mode, the NI WSN-3226 supports single-ended DC measurements. Each channel has an AI and a COM terminal to which you can connect a voltage signal. Figure 13 shows the NI WSN-3226 input circuitry in voltage mode. To measure a voltage signal, connect the positive lead to the AI terminal, and the ground lead to the adjacent COM terminal. Figure 14 shows an example of a single-ended voltage signal connected to the NI WSN-3226. The COM terminal is internally connected to the ground reference of the NI WSN-3226. Each channel includes overvoltage protection. Refer to the *Specifications* section for more information about overvoltage protection.

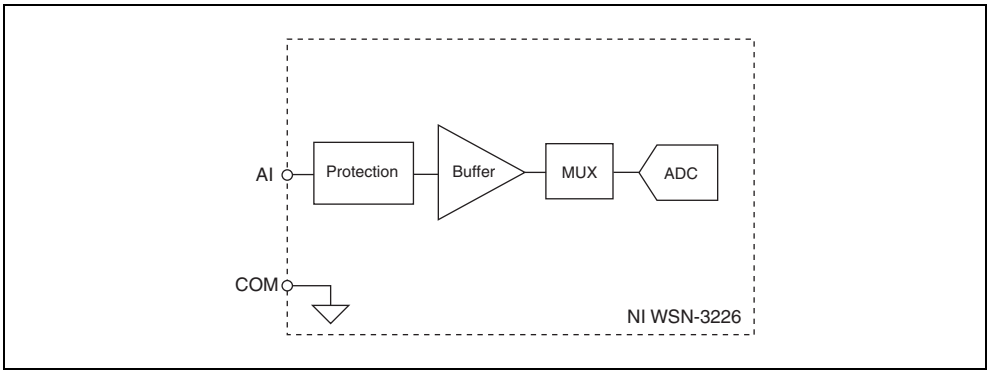

Figure 13. Input Circuitry for One Channel in Voltage Mode

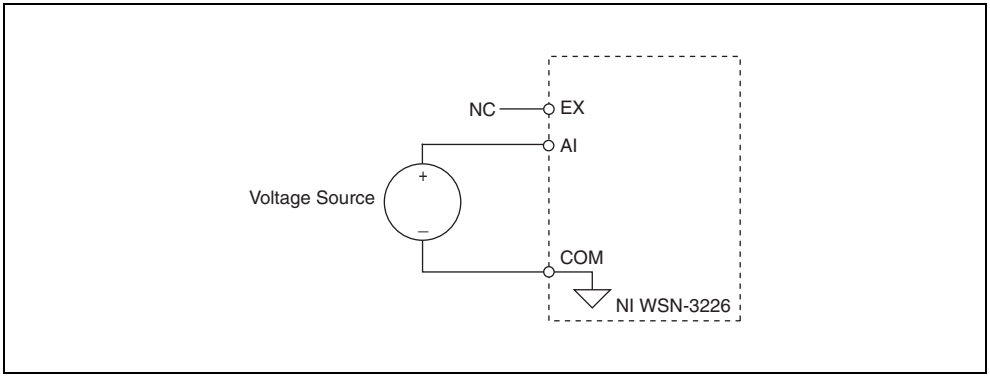

Figure 14. Connecting a Single-Ended Voltage Signal

Resistance/RTD Mode

Note You must use 2-wire ferrules to create a secure connection when connecting more than one wire to a single terminal on the NI WSN-3226.

In resistance/RTD mode, the NI WSN-3226 supports 3-wire RTDs. The NI WSN-3226 supports three ranges:

- Up to 400 Ω for 100 Ohm Platinum (Pt100) RTDs
- Up to 4000 Ω for 1000 Ohm Platinum (Pt1000) RTDs
- Up to 100 kΩ for thermistors and general-purpose resistors

These ranges are selectable per node; all channels set to resistance/RTD mode are set to the same range. The node also protects each channel from overvoltages. Refer to the *Specifications* section for more information about overvoltage protection. Figure 15 shows the NI WSN-3226 input circuitry in resistance mode.

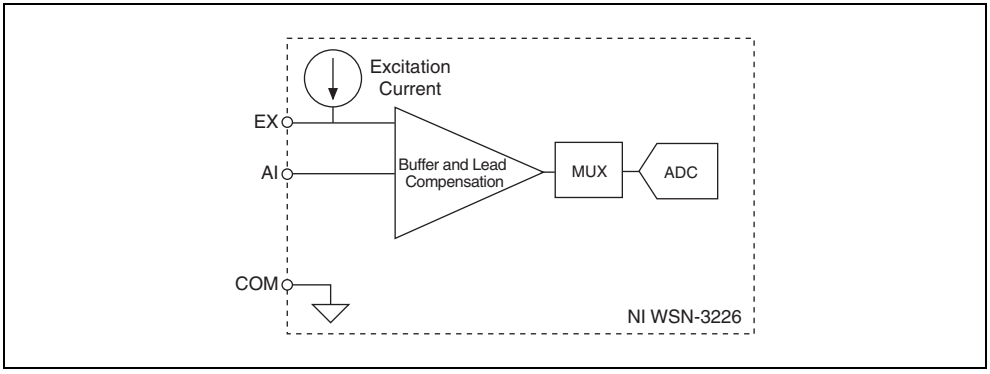

Figure 15. Input Circuitry for One Channel in Resistance Mode

There are four RTD channels on the NI WSN-3226. Each channel has three terminals:

- EX terminal—Sources the excitation current. Connect the positive lead of the RTD to this terminal.
- AI terminal—Measures the RTD resistance. Connect the sense lead of the RTD to this terminal.
- COM terminal—Connect the negative lead of the RTD to this terminal.

Figure 16 shows an example of connecting a RTD to the NI WSN-3226.

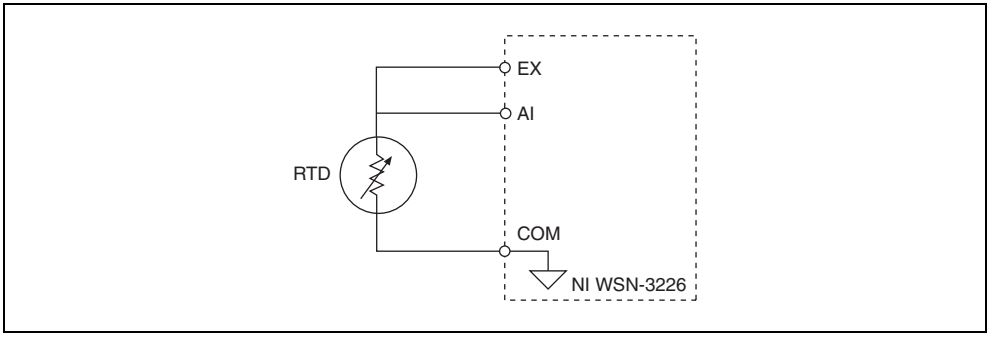

Figure 16. Connecting a RTD

The NI WSN-3226 sources different current levels on the EX terminal depending on the selected range. For more information about the current source value for each range, refer to the *Specifications* section.

The NI WSN-3226 compensates for lead resistance errors. For the best measurement results when measuring a 3-wire RTD, use equal length wires between the RTD and the EX, AI, and COM terminals. You should also keep the leads as short as possible.

RTD Types

RTD types are specified by material composition, nominal resistance at 0 °C, and TCR (temperature coefficient of resistance, or alpha). The NI WSN-3226 can directly measure the temperature of platinum RTDs of either 100 Ω or 1,000 Ω nominal resistance. These RTDs are commonly referred to as Pt100 or Pt1000 RTDs, respectively.

Different types of platinum RTDs have different TCRs. The NI WSN-3226 supports the following TCRs: 3750, 3851, 3911, 3916, 3920, and 3928 µΩ/Ω/°C. The most common TCR for RTDs is 3851 µΩ/Ω/°C, as defined in IEC-751, DIN 43760, BS 1904, and ASTM E1137 international standards.

The TCR of 3928 µΩ/Ω/°C is used in the reference function for platinum thermometers in the International Temperature Scale of 1990 (ITS-90) for high-accuracy metrology applications. Unfortunately, not all TCR values are as well defined by standards organizations, and the behavior of RTDs with the same TCR value may vary from vendor to vendor. The variations are usually small. The built-in linearization algorithms of the NI WSN-3226 are appropriate for nearly all applications.

The NI WSN-3226 uses a linearization curve known as the Callendar-Van Dusen equation to measure the temperature of RTDs. The equation is as follows:

Temperatures below 0 °C:

$$R_T = R_0[1 + A \times T + B \times T^2 + C \times T^3 \times (T - 100\ °C)]$$

Temperatures above 0 °C:

$$R_T = R_0[1 + A \times T + B \times T^2]$$

where T = temperature in °C

R_T = RTD resistance at temperature T

R_0 = RTD nominal resistance at 0 °C

A, B, C are coefficients given in Table 3

Table 3 lists the coefficients used in this equation for the TCR values that the NI WSN-3226 supports. If you have a nonstandard RTD that does not match one of these linearization curves, measure the RTD in the resistance mode of NI WSN-3226, and convert the resistance to temperature in the manner suggested by the RTD vendor.

Table 3. NI WSN-3226 Callendar-Van Dusen Coefficients

TCR µΩ /Ω /°C	A $(°C)^{-1}$	B $(°C)^{-2}$	C $(°C)^{-4}$
3750	3.81×10^{-3}	-6.02×10^{-7}	-6.0×10^{-12}
3851	3.9083×10^{-3}	-5.775×10^{-7}	-4.183×10^{-12}
3911	3.9692×10^{-3}	-5.8495×10^{-7}	-4.233×10^{-12}
3916	3.9739×10^{-3}	-5.870×10^{-7}	-4.4×10^{-12}
3920	3.9787×10^{-3}	-5.8686×10^{-7}	-4.167×10^{-12}
3928	3.9888×10^{-3}	-5.915×10^{-7}	-3.85×10^{-12}

Controlling Digital Inputs and Outputs

The following sections discuss how to configure the NI WSN-3226 device for different types of input and output, and how to connect external devices to the NI WSN-3226 DIO terminals.

On the 18-position screw terminal connector, terminals 13–17 are the DIO section. The DIO section has the following terminals:

- DIO*x*—signal terminal
- DGND—ground terminal
- DIO PWR—DIO Power positive (required when one of the DIO channels is configured for *Drive High (Sourcing)* or *Drive High and Low (Sinking and Sourcing)* mode)

Note Use the **Node Properties** dialog box in the LabVIEW Project Explorer window to change DIO settings.

The NI WSN-3226 device has two bi-directional digital I/O channels. Each channel supports eight operational modes depending on whether the channel is configured as digital output or digital input. The NI-WSN software controls the different modes of operation by turning on and off the high side and low side switches.

Digital Output Operational Modes

The channels support the following digital output operational modes:

- *Drive High (Sourcing)*
- *Drive Low (Sinking)*
- *3V TTL Logic (Open-Collector with Pull-Up)*
- *Drive High and Low (Sinking and Sourcing)*

Note When configured in a digital output mode, reading the channel returns the state of the pin voltage with TTL thresholds.

Digital Input Operational Modes

The channels support the following digital input operational modes:

- *24V Sinking*
- *24V Sinking with Power Management*
- *TTL Logic*
- *Contact Closure*

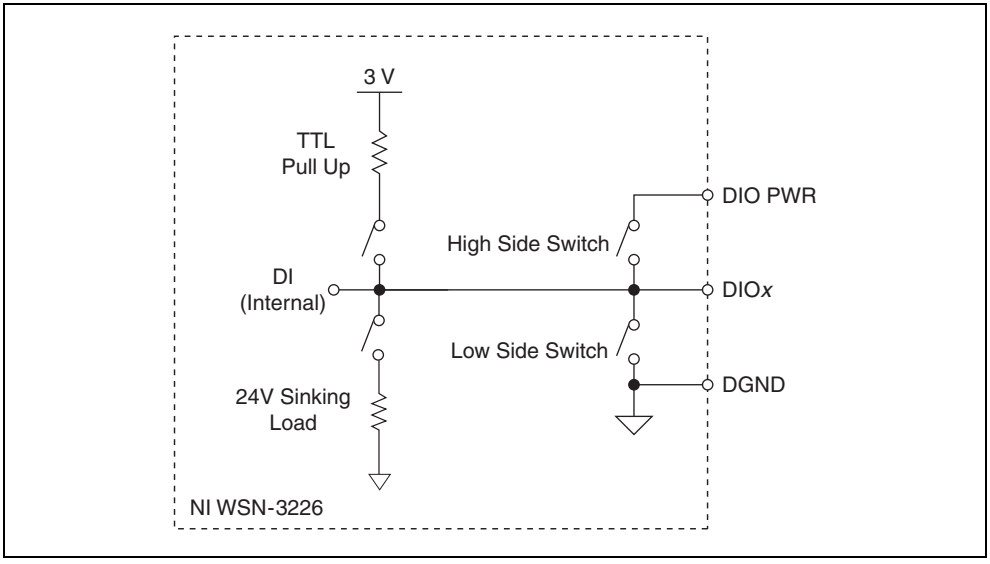

Figure 17. Simplified Circuit Diagram of One DIO Channel

Connecting Digital Outputs

You can connect a variety of industrial devices such as solenoids, relays, and indicators to the NI WSN-3226 device. Refer to the *Specifications* section to ensure compatibility.

Note You must use 2-wire ferrules to create a secure connection when connecting more than one wire to a single terminal on the NI WSN-3226.

Note You can connect only one external DIO PWR supply to the NI WSN-3226.

The power supply provides the current for the devices you connect to the NI WSN-3226. Connect the power supply positive lead to DIO PWR terminal and the power supply negative lead to one of the DGND terminals. The DIO PWR terminal on the NI WSN-3226 is internally connected to each digital channel. Refer to the *Specifications* section for information about the power supply voltage range.

Note The *Drive High (Sourcing)* and *Drive High and Low (Sinking and Sourcing)* modes require an external power supply connected to the DIO PWR terminal.

Drive High (Sourcing)

Drive High (Sourcing) mode is for devices that require high side drive or a sourcing output. When using this mode:

- Connect the device to DIO*x* and connect the device common to the DGND terminal corresponding to that DIO*x* terminal.
- The DIO*x* terminal is driven to the voltage supplied to DIO PWR when you turn on the channel.
- Writing a digital value of 1 turns on the channel, and 0 turns off the channel.
- The channel is high impedance when the channel is turned off (0).

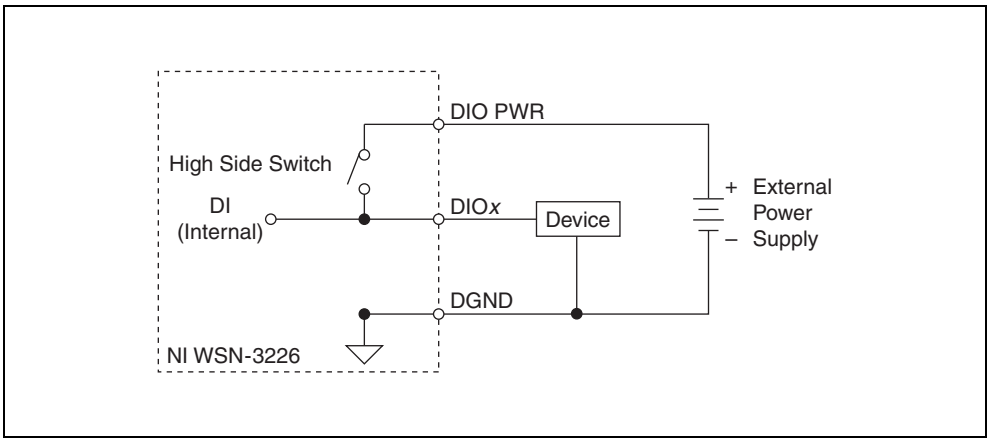

Figure 18. Connecting a Device to the NI WSN-3226 in Drive High Mode

Drive Low (Sinking)

Drive Low (Sinking) mode is for devices that require low side drive or a sinking output. When using this mode:

- The DIO*x* terminal is pulled to DGND when you turn on the channel.
- Writing a digital value of 0 turns on the channel, and writing a digital value of 1 turns off the channel.

- The channel is high impedance when the channel is turned off (1).
- When driving inductive loads, use an external flyback diode or snubber circuit as shown in Figure 19.

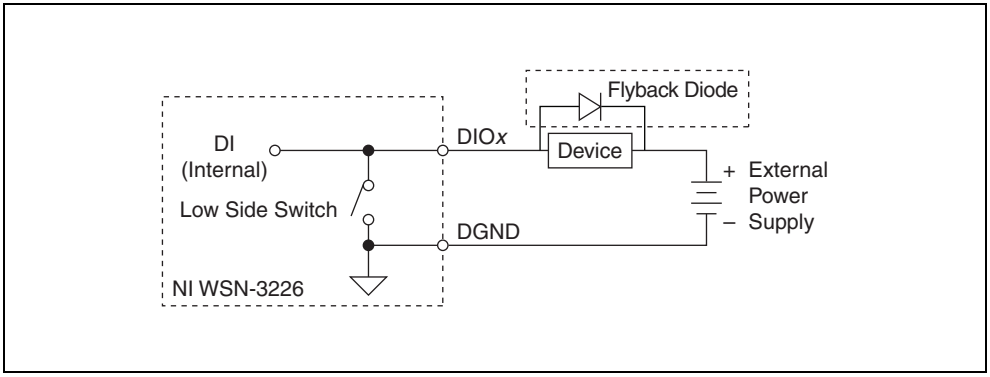

Figure 19. Connecting a Device to the NI WSN-3226 in Drive Low (Sinking) Mode

3V TTL Logic (Open-Collector with Pull-Up)

The 3V TTL Logic (Open-Collector with Pull-Up) mode can be used to connect to 3 V and 5 V logic inputs with TTL Logic compatible thresholds. When using this mode:

- The DIO*x* terminal is pulled-up to 3 V through a pull-up resistor for a DIO output value of 1 and driven low to ground for a DIO output value 0.
- The DIO line is read with 3V TTL Logic input thresholds.
- A supply voltage is not required on DIO PWR.

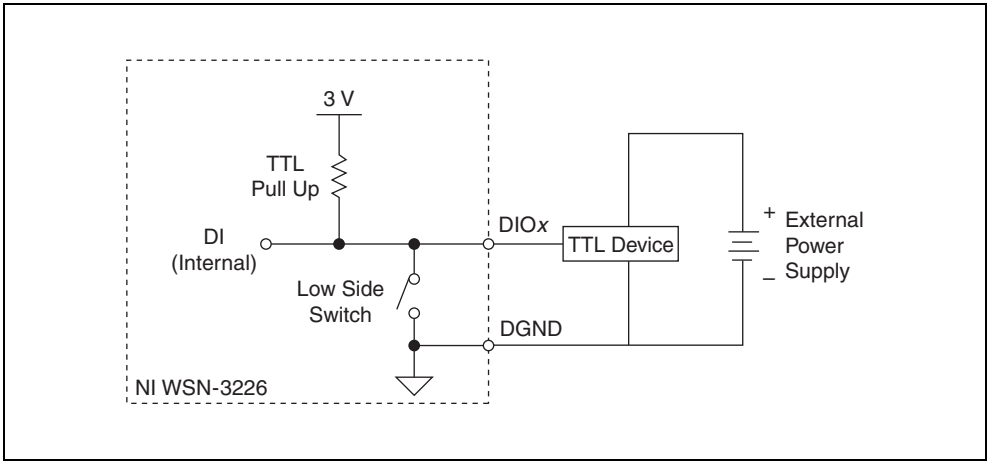

Figure 20. Connecting a Device to the NI WSN-3226 in 3V TTL Logic Mode

Drive High and Low (Sinking and Sourcing)

When using *Drive High and Low (Sinking and Sourcing)* mode:

- Connect the device to DIO*x* and connect the device common to the DGND terminal corresponding to that DIO*x* terminal.

- The DIO*x* terminal is driven to the voltage supplied to DIO PWR when you turn on the channel, and is driven to DGND when you turn off the channel.
- If a supply voltage is not connected to DIO PWR, it operates as if it is set to the *Drive Low (Sinking)* mode.
- Writing a digital value of 1 turns on the channel and writing a 0 turns the channel off.

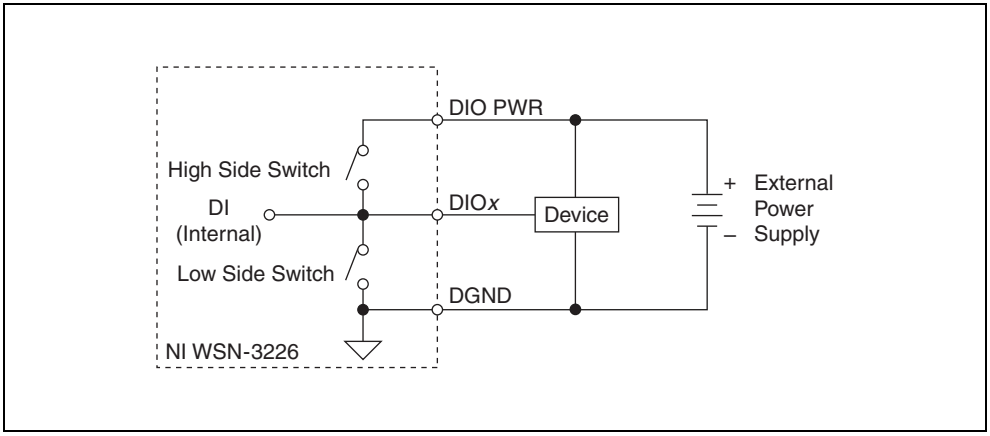

Figure 21. Connecting a Device to the NI WSN-3226 in Drive High and Low Mode

Connecting Digital Inputs

You can connect a variety of sensors, switches, and industrial devices to the NI WSN-3226 device. Refer to the *Specifications* section to ensure compatibility.

24V Sinking

In 24V Sinking mode, the DIO*x* terminal has a low impedance to ground and input thresholds compatible with 24 V signaling. Select this mode for connection to industrial 24V/IEC1131 sourcing output devices.

24V Sinking with Power Management

In 24V Sinking with Power Management mode, the DIO*x* terminal is similar to 24V Sinking mode, but the low impedance path to ground is removed when the inputs are not being actively read. This can reduce the power consumption of the output device. This mode should only be used with output devices that have valid output states within 100 µs of having a low impedance path presented to the output.

TTL Logic

TTL Logic mode is suitable for most 3 V or 5 V logic signals. The DIO*x* terminal has high impedance inputs with TTL Logic compatible thresholds.

Contact Closure

Contact Closure mode is suitable for connections to contact switches wired between the input and ground. The DIO*x* terminal has *TTL Logic* compatible thresholds and provides a pull-up resistor to 3 V when the input is being read. If a contact to ground remains closed while the DIO Notification property is enabled, the current into the contact switch increases power consumption and can reduce battery life.

Digital I/O Protection

The high side switch on each I/O channel has short circuit protection. The low side switch on each I/O channel is oversized to be able to withstand higher currents than when in normal operating conditions.

Understanding Short Circuit Protection

The current that flows through the high side switch is continuously sensed. If a current above the trip limit is detected, the current protection trips and turns off the high side switch. The protection latches in the tripped state and only resets when the high side switch is given the command to turn off. High inrush currents that exist for a short time do not trip the short-circuit protection. Refer to the *Specifications* section for more information about the maximum continuous output current, short circuit behavior, and short circuit trip time.

Preventing an Overcurrent Condition

Follow these recommendations to prevent an overcurrent condition:

- Do *not* connect DIO PWR to ground.
- Do *not* ground unused terminals.
- Do *not* exceed the output current rating of the channel.
- Do *not* exceed the voltage ratings of the channel.

Detecting a Overcurrent Condition

To check whether or not the short circuit protection is tripped, the logic state of the DIO pin can be read when driving high using the digital input function. If DO is set to *Drive High (Sourcing)* or *Drive High and Low (Sinking and Sourcing)* modes and a digital value of 1 is written to the channel, a logical 1 should be read from the channel. If a logical 0 is read instead, then the current protection is tripped or a fault is preventing the high side switch from driving the output high.

Resetting Channels After an Overcurrent Condition

To reset the short circuit protection turn off the high side switch by writing a digital value of 0 to the channel. Then, check the wiring and remove any possible faults. The correct functionality of the circuit should be confirmed by writing a digital value 1 to the channel and then reading a logical 1 from it.

Powering an External Sensor

The NI WSN-3226 can provide up to 50 mA at 12 V to external sensors through its sensor power (SEN PWR 12V) terminal. You can configure this sensor power output using NI-WSN software to turn on a sensor up to 250 ms prior to the start of an acquisition. Figure 22 shows the sensor power circuit connected to a device.

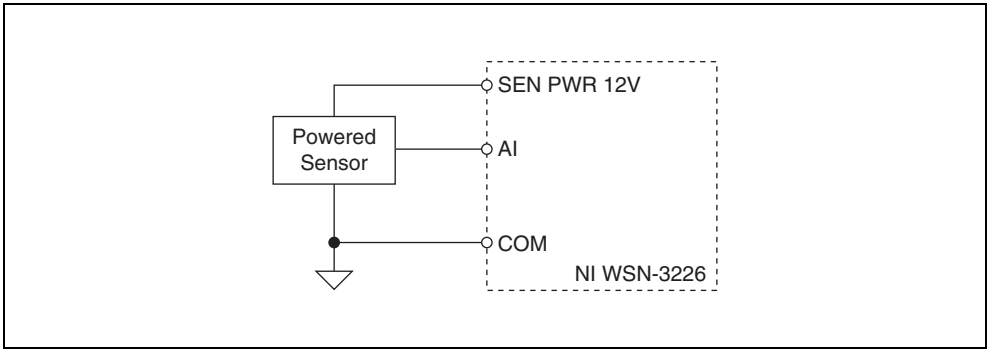

Figure 22. External Sensor Connected to the NI WSN-3226

Make sure the device you are connecting is compatible with the NI WSN-3226 sensor power circuit voltage and current ranges. Refer to the *Specifications* section for more information.

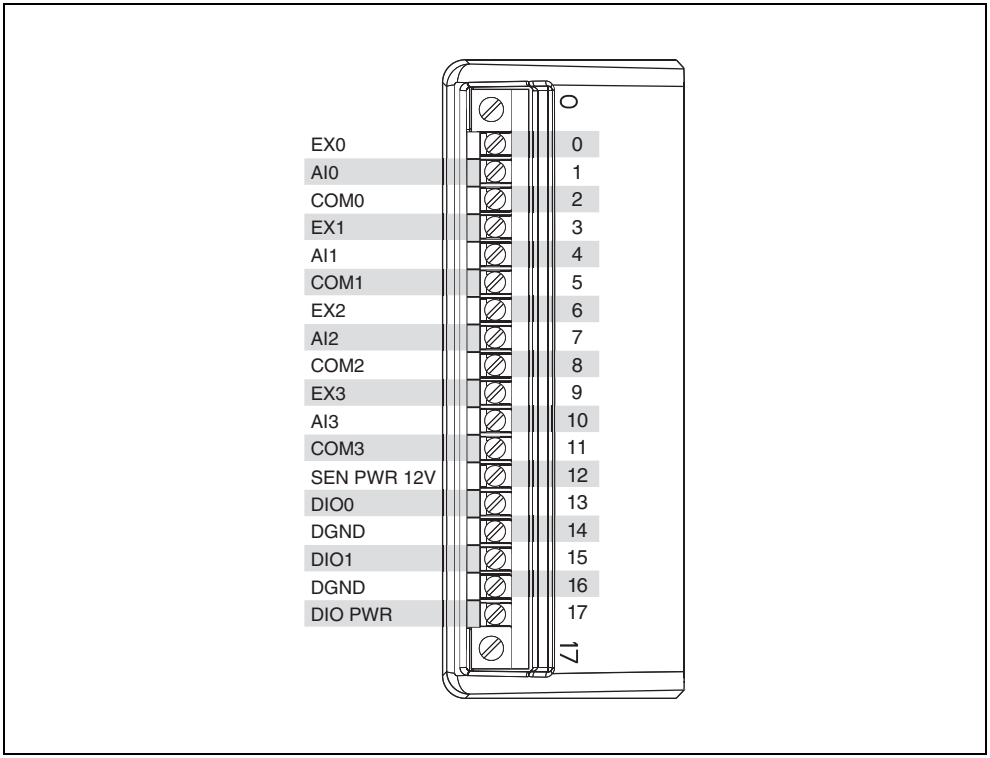

Figure 23. NI WSN-3226 Pinout

Specifications

These specifications are typical from –40 to 70 °C, and assume high rejection strength mode and 50/60 Hz filter rejection mode unless otherwise noted. Some specifications (such as sample interval and power consumption) can be optimized by customizing node behavior with the NI LabVIEW Wireless Sensor Network (WSN) Module Pioneer. Refer to the *LabVIEW WSN Pioneer Performance Benchmarks* document, at `zone.ni.com` for more information.

For the NI WSN gateway specifications, refer to the gateway documentation.

Analog Input Characteristics

Number of channels ..... 4 single-ended

Sampling mode ..... Scanned

Minimum sample interval ..... 1 s

ADC resolution ..... Up to 20 bits

DNL ..... No missing codes guaranteed

Modes (configurable per channel) ..... Voltage, 3-wire RTD/resistance

Powerline filtering modes ..... 50 Hz, 60 Hz, 50/60 Hz, none

Normal mode rejection, filter characteristics

Filtering Strength	Filter Rejection
High rejection	–60 dB at 50 and/or 60 Hz, ±1 Hz
Low power	–30 dB at 50 and/or 60 Hz, ±1 Hz

Overvoltage protection.....±30 VDC

Voltage Input

Nominal range.....±10 VDC

Input impedance.....1 MΩκ

Noise .....30 μV_{rms}

Voltage Accuracy

Gain drift.....11 ppm/°C

Offset drift.....90 µV/°C

Measurement Conditions	Percent of Reading (Gain Error)	Percent of Range* (Offset Error)
Typical, 25 °C, ±5 °C	±0.02%	±0.01% (±1 mV)
Maximum, –40 °C to 70 °C	±0.2%	±0.1% (± 10 mV)
* Range equals 10 V		

Resistance Input

Nominal Range	Excitation Current
10 to 400 Ω	1 mA
20 to 4000 Ω	350 µA
250 to 100 kΩ	20 µA

RTD Temperature Accuracy*

Range	Measurement Conditions	Typical (25 °C, ±5 °C)	Maximum, (–40 °C to 70 °C)	Temperature Drift	Noise
Pt100	–200 °C to 150 °C 150 °C to 850 °C	0.2 °C 0.3 °C	1 °C 2.7 °C	0.017 °C/°C 0.028 °C/°C	0.01 $°C_{rms}$
Pt1000	–200 °C to 150 °C 150 °C to 850 °C	0.1 °C 0.2 °C	0.7 °C 2 °C	0.005 °C/°C 0.013 °C/°C	0.01 $°C_{rms}$
* Up to 5 m of 22 AWG copper leads, 5% lead length mismatch.					

Resistance Accuracy*

Range	Measurement Conditions	Percent of Range (Offset Error)	Percent of Reading (Gain Error)	Typical Temperature Drift		Noise
				Offset	Gain	
400 Ω	Typical (25 °C, ±5 °C)	±0.02% (±0.08 Ω)	±0.01%	±6 mΩ/°C	±10 ppm/°C	0.005 Ω_{rms}
	Maximum (–40 °C to 70 °C)	±0.08% (±0.32 Ω)	±0.2%			
4000 Ω	Typical (25 °C, ±5 °C)	±0.005% (±0.2 Ω)	±0.01%	±13 mΩ/°C	±11 ppm/°C	0.02 Ω_{rms}
	Maximum (–40 °C to 70 °C)	±0.05% (±2 Ω)	±0.15%			
100 kΩ	Typical (25 °C, ±5 °C)	±0.005% (±5 Ω)	±0.01%	±0.3 Ω/°C	±18 ppm/°C	5 Ω_{rms}
	Maximum (–40 °C to 70 °C)	±0.05% (±50 Ω)	±0.21%			

* Up to 5 m of 22 AWG copper leads, 5% lead length mismatch.

Sensor Power

Voltage ..... 12 V ±10%

Current ..... 50 mA maximum

Protection

Short circuit proof ..... Indefinitely

Overvoltage protection ..... ±30 V

Digital I/O

Number of channels 2

Power-on output state ..... High impedance

DIO pin capacitance ..... 2000 pF

Digital Input

Modes (configurable per channel) ..... *24V Sinking*, *24V Sinking with Power Management*, *TTL Logic*, *Contact Closure*

Input voltage range ..... 0 to 30 VDC maximum

Digital input logic level thresholds

TTL Logic and Contact Closure modes

High level (ON) input voltage .....≥2 V

Low level (OFF) input voltage.....≤0.8 V

24V modes

IEC 1131-2 compatibility .....Type 1 and 3

High level (ON) input voltage .....≥10 V

High level (ON) input current.....≥2 mA

High level (OFF) input voltage.....≤6 V

Low level (OFF) input current.....≤1 mA

Input current

TTL Logic and Contact Closure modes.....≤375 µA at 30 V
≤110 µA at 5 V
≤80 µA at 3 V

Contact Closure mode pull-up current.....≤175 µA through closed contact

24V modes .....≤6.4 mA at 30 V
≤3.2 mA at 15 V

Minimum detectable pulse width

TTL Logic mode.....30 µs

24V modes .....30 µs

Contact closure mode.....100 µs

Digital Output

Modes (configurable per channel) .....*Drive High (Sourcing)*, *Drive Low (Sinking)*, *Drive High and Low (Sinking and Sourcing)*, and *3V TTL Logic (Open-Collector with Pull-Up)*

DIO power supply voltage range (V_{DIO_PWR}) .....3 to 30 V

Sourcing current (one channel).....0.25 A maximum

Sinking current (per channel) .....1 A maximum

Output voltage

Sourcing .....>(V_{DIO_PWR}–750 mV) with I_{OUT} <0.25 A

Sinking .....<50 mV with I_{OUT} <1 A

3V TTL Logic mode pull-up .....>2 V with I_{OUT} <20 µA

DO protection

Voltage .....+30 VDC maximum

Reversed voltage .....None

Short circuit (sourcing)

Trip current .....0.26 A minimum, 1.2 A maximum

Trip time.....<250 µs, at 1.2 A

Overcurrent (sinking).....6.5 A maximum

DO propagation delay

Sinking .....150 µs

Sourcing .....2.5 ms

Node Resources for LabVIEW WSN

Minimum sample interval ..... 0.1 s

User flash size ..... 188 Kbytes

Number of flash erase cycles per sector 100,000

Wireless Characteristics

Radio mode ..... IEEE 802.15.4

RF data rate ..... 250 Kbps

Range

- Americas ..... Up to 300 m
- International ..... Up to 150 m

Frequency band[1] ..... ISM 2.4 GHz (2400 MHz to 2483.5 MHz)

Channels[1] 11–24

TX power

- Americas ..... +17 dBm maximum (50 mW)
- International ..... +10 dBm maximum

Modulation type ..... DSSS (O-QPSK)

Receiver sensitivity ..... –102 dBm

Antenna

- Connector ..... Female RP-SMA connector
- VSWR ..... 2.0 maximum
- Impedance ..... 50 Ω
- Directivity ..... Omni

Nominal gain ..... 1.5 dBi

Power Requirements

The following power requirements specifications are typical at 25 °C.

Battery Power

Caution Do *not* use rechargeable batteries.

Internal battery ..... 4 AA 1.5 V alkaline or lithium batteries

Recommended batteries ..... Energizer EN 91 AA, alkaline
Duracell MN1500 AA, alkaline
Energizer L91 AA, lithium

Battery operating temperature range

- Energizer L91 ..... –40 °C to 60 °C
- Energizer E91 ..... –18 °C to 55 °C
- Duracell MN1500 ..... –20 °C to 54 °C

Voltage range ..... 3.6 to 7.5 V

[1] Due to regulations, the frequency bands depend upon country of operation.

Power consumption[1]

Sleep mode.....0.3 mW

60 second sample interval.....0.5 mW

1 second sample interval.....20 mW

Battery life[1]

60 second sample interval.....Up to 3 years

1 second sample interval.....Up to 1 month

External Power

Caution You *must* use a UL Listed ITE power supply marked LPS with the NI WSN-3226. The power supply must also meet any safety and compliance requirements for the country of use.

Voltage range .....5 to 30 V

Power input mating connector .....2-position mini-combicon,
Phoenix Contact part number: 1714977

Power consumption[2]

Sleep mode.....1 mW

60 second sample interval.....1 mW at 12 V

1 second sample interval.....20 mW at 12 V

Router mode[3] .....200 mW at 12 V

Physical Characteristics

Screw-terminal wiring .....14 to 24 AWG wire

Torque for screw terminals .....0.2 to 0.25 N · m

Dimensions .....Refer to Figure 2 for device dimensions

Weight.....Approx. 242 g (8.5 oz)

Weight with antenna .....Approx. 256 g (9 oz)

Calibration

You can obtain the calibration certificate and information about calibration services for the NI WSN-3226 at `ni.com/calibration`.

Calibration interval .....3 years

Safety Standards

The NI WSN-3226 is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1

[1] Device executing NI-WSN firmware. End node mode. AI0..3 configured in resistance mode.

[2] Device executing NI-WSN firmware. AI0..3 configured in resistance mode.

[3] Router connected directly to a NI WSN gateway. 1 second sample interval.

Note For UL and other safety certifications, refer to the product label, or go to `ni.com/certification`, search by model number or product line, and click the appropriate link in the Certification column.

Hazardous Locations

U.S. (UL) .....Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, AEx nC IIC T4

Canada (C-UL) .....Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, Ex nL IIC T4

Europe (DEMKO).....Ex nA nL IIC T4

Safety Voltages

Connect only voltages that are within these limits.

V terminal to C terminal .....30 V maximum, Measurement Category I

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as MAINS voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.

Caution Do *not* connect the system to signals or use for measurements within Measurement Categories II, III, or IV.

RF Safety Warning

This product complies with FCC radiation exposure limits set for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This product generates and radiates radio frequency energy. To comply with the radio frequency radiation exposure guidelines in an uncontrolled environment, this equipment should be installed and operated with at least 20 cm between the radiator and the person's body (excluding extremities: hands, wrists, feet, and legs).

This product complies with the European Council Recommendation (1995/519/EC) on the limitation of exposure of the general public to electromagnetic fields. Compliance was determined in accordance with the requirements in EN 50371.

Environmental

Operating temperature
(IEC-60068-2-1 and IEC-60068-2-2) .....–40 to 70 °C

Storage temperature
(IEC-60068-2-1 and IEC-60068-2-2) .....–40 to 85 °C

Operating humidity (IEC-60068-2-56).....10 to 90% RH, noncondensing

Storage humidity (IEC-60068-2-56).....5 to 95% RH, noncondensing

Pollution Degree (IEC 60664) 2

Maximum altitude.....2,000 m

Indoor use only

Shock and Vibration

Operating vibration, random (IEC 60068-2-64) ....5 g_{rms}, 10 to 500 Hz

Operating shock (IEC 60068-2-27) .....30 g, 11 ms half sine,
50 g, 3 ms half sine,
18 shocks at 6 orientations

Operating vibration,
sinusoidal (IEC 60068-2-6) .....5 g, 10 to 500 Hz

Electromagnetic Compatibility

Caution Electromagnetic interference can adversely affect the measurement accuracy of this product. The input/output terminals of this device are not protected for electromagnetic interference. As a result, this device may experience reduced measurement accuracy or other temporary performance degradation when connected cables are routed in an environment with radiated or conducted radio frequency electromagnetic interference. To limit radiated emissions and to ensure that this device functions within specifications in its operational electromagnetic environment, take precautions when designing, selecting, and installing measurement probes and cables.

This product is designed to meet the requirements of the following standards of EMC for electrical equipment for measurement, control, and laboratory use:

- EN 61326-2-1 (IEC 61326-2-1): Class A emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- AS/NZS CISPR 11: Group 1, Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions

This product also meets the requirements of the following EMC standards for intentional radiators:

- EN 300 328
- EN 301 489-1 and EN 301 489-17
- FCC 47 CFR Part 15C
- IC RSS-210

Note For EMC certification and additional information, refer to the product label or the *Online Product Certification* section.

CE Compliance CE

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility (EMC) Directive
- 1999/5/EC; Radio and Telecommunications Terminal Equipment (R&TTE) Directive

Regulatory Information

United States

This product complies with Part 15 of the FCC Rules. Operation is subject to these two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada

This product complies with Industry Canada RSS-210.

Cet appareil est conforme aux norme RSS210 d'Industrie Canada.

Europe—EU Declaration of Conformity CE

Marking by the above CE symbol on the label indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards: EN 300 893, EN 300 328, EN 301 489-17, EN 60950.

Europe – Restrictions for Use of 2.4 GHz Frequencies in European Community Countries

België/ Belgique:	For private usage outside buildings across public grounds over less than 300 m no special registration with IBPT/BIPT is required. Registration to IBPT/BIPT is required for private usage outside buildings across public grounds over more than 300 m. For registration and license please contact IBPT/BIPT.
	Voor privé-gebruik buiten gebouw over publieke groud over afstand kleiner dan 300 m geen registratie bij BIPT/IBPT nodig; voor gebruik over afstand groter dan 300 m is wel registratie bij BIPT/IBPT nodig. Voor registratie of licentie kunt u contact opnemen met BIPT.
	Dans le cas d'une utilisation privée, à l'extérieur d'un bâtiment, au-dessus d'un espace public, aucun enregistrement n'est nécessaire pour une distance de moins de 300 m. Pour une distance supérieure à 300 m un enregistrement auprès de l'IBPT est requise. Pour les enregistrements et licences, veuillez contacter l'IBPT.
Deutschland:	License required for outdoor installations. Check with reseller for procedure to follow.
	Anmeldung im Outdoor-Bereich notwendig, aber nicht genehmigungspflichtig.Bitte mit Händler die Vorgehensweise abstimmen.
France:	Restricted frequency band: only channels 1 to 7 (2400 MHz and 2454 MHz respectively) may be used outdoors in France.
	Bande de fréquence restreinte : seuls les canaux 1–7 (2400 et 2454 MHz respectivement) doivent être utilisés endroits extérieur en France. Vous pouvez contacter l'Autorité de Régulation des Télécommuniations (`http://www.art-telecom.fr`) pour la procédure à suivre.
Italia:	License required for indoor use. Use with outdoor installations not allowed.
	E'necessaria la concessione ministeriale anche per l'uso interno. Verificare con i rivenditori la procedura da seguire.
Nederland:	License required for outdoor installations. Check with reseller for procedure to follow.
	Licentie verplicht voor gebruik met buitenantennes. Neem contact op met verkoper voor juiste procedure.

Japan

The certified radio equipment is embedded in this device.

201WW 08215142 本機器には認証済み無線設備が内蔵されています

Singapore

Complies with IDA Standards DA105692

Taiwan R.O.C

低功率電波輻射性電機管理辦法
第十二條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
第十四條低功率射頻電機之使用不得影響飛航安全及幹擾合法通信；經發現有幹擾現象時，應立即停用，並改善至無幹擾時方得繼續使用。
前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之幹擾。

EU Regulatory Statements

cs Česky [Czech]	*National Instruments* tímto prohlašuje, _e tento NI WSN-3226 je ve shodě se základními po_adavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
da Dansk [Danish]	Undertegnede *National Instruments* erklćrer herved, at fřlgende udstyr NI WSN-3226 overholder de vćsentlige krav og řvrige relevante krav i direktiv 1999/5/EF.
de Deutsch [German]	Hiermit erklärt *National Instruments*, dass sich das Gerät NI WSN-3226 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
et Eesti [Estonian]	Käesolevaga kinnitab*National Instruments* seadme NI WSN-3226 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
en English	Hereby, *National Instruments*, declares that this NI WSN-3226 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
es Español [Spanish]	Por medio de la presente *National Instruments* declara que el NI WSN-3226 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
el Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ *National Instruments* ΔΗΛΩΝΕΙ ΟΤΙ NI WSN-3226 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
fr Français [French]	Par la présente *National Instruments* déclare que l'appareil NI WSN-3226 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano [Italian]	Con la presente *National Instruments* dichiara che questo NI WSN-3226 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo *National Instruments* deklarē, ka NI WSN-3226 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo *National Instruments* deklaruoja, kad šis NI WSN-3226 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart *National Instruments* dat het toestel NI WSN-3226 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]	Hawnhekk, *National Instruments*, jiddikjara li dan NI WSN-3226 jikkonforma mal-htigijiet essenzjali u ma provvedimenti ohrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]	Alulírott, *National Instruments* nyilatkozom, hogy a NI WSN-3226 megfelel a vonatkozó alapvetõ követelményeknek és az 1999/5/EC irányelv egyéb elõírásainak.
Polski [Polish]	Niniejszym *National Instruments*. oświadcza, że NI WSN-3226 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	*National Instruments* declara que este NI WSN-3226 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]	*National Instruments* izjavlja, da je ta NI WSN-3226 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	*National Instruments* týmto vyhlasuje, _e NI WSN-3226 spĺňa základné po_iadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]	*National Instruments* vakuuttaa täten että NI WSN-3226 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar *National Instruments* att denna NI WSN-3226 står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska [Icelandic]	Hér með lýsir *National Instruments* yfir því að NI WSN-3226 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	*National Instruments* erklærer herved at utstyret NI WSN-3226 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit `ni.com/certification`, search by model number or product line, and click the appropriate link in the Certification column.

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI and the Environment* Web page at `ni.com/environment`. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)

EU Customers At the end of the product life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste and Electronic Equipment, visit `ni.com/environment/weee`.

Battery Replacement and Disposal

Battery Directive After replacement, recycle the old battery. For information about the available collection and recycling scheme (and your nearest National Instruments Branch Office) or on Battery Directive compliance (Directive 2006/66/EC of the European Parliament and Council) in a particular EU country visit `ni.com/company/citizenship/product.htm#battery`.

电子信息产品污染控制管理办法 （中国 RoHS）

中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。
关于 National Instruments 中国 RoHS 合规性信息，请登录 `ni.com/environment/rohs_china`。
(For information about China RoHS compliance, go to `ni.com/environment/rohs_china`.)

Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At `ni.com/support` you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at `ni.com/support` and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020,
Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800,
Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511,
France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737,
Italy 39 02 41309277, Japan 0120-527196, Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28,
Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466,
New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 328 90 10,
Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886,
Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085,
Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222,
Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

LabVIEW, National Instruments, NI, ni.com, the National Instruments corporate logo, and the Eagle logo are trademarks of National Instruments Corporation. Refer to the *Trademark Information* at `ni.com/trademarks` for other National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at `ni.com/patents`.

© 2010 National Instruments Corporation. All rights reserved.

373007B-01 Nov10